



USER MANUAL

CONTENTS

SAFETY 01
INTRODUCTION 02
PHOTOMETRICS 03
DIMENSION 04
OVERVIEW 05
INSTALLATION 06
CONNECTION 07
MENU 10
DMX CHART11
NOTE 12
MAINTENANCE 13

- \cdot Errors or omissions may be possible.
- \cdot All specifications are subject for change without prior notice.
- · Please scan the QR code to visit our website for products information updates:





SAFETY



WARNING!Before carrying out any operations with the unit, carefully read this instruction manual and keep it with care for future reference, It contains important information about the installation, user and maintenance of the unit.



General instruction

- The products referred to in this manual conform to the European Community Directives and are therefore marked with CE.
- The unit is supplied with hazardous network voltage. Leave serving to skilled personnel only. Never make any modifications on the unit not described in this instruction manual, otherwise you will risk an electric shock.
- Connection must be made to power supply system fitted with efficient earthing (Class I appliance according to standard EN60598-1). It is moreover, recommended to protect the supply lines of the units from indirect contact and/or shorting to earth by using appropriately sized residual current devices.
- The connection to the main network of electric distribution must be carried out by a qualified electrical installer. Check that the main frequency and voltage correspond to those for which the unit is designed as given on the electrical data lable.
- This unit is not for home use, only professional applications.
- Never use the fixture under the following conditions:
 - in places subject to vibrations or bumps;
 - in places with a temperature of over 40°C.
- Make certain that no inflammable liquids, water ot metal objects enter the fixture.
- Do not dismantle or modify the fixture.
- All work must always be carried out by qualified technical personnel. Contact the nearest sales point for an inspection or contact the manufacturer directly.
- If the unit is to be put out of operation definitively, take it to a local recyling plant for a dosposal which is not harmful to the environment.



Warnings and installation precautions

- This euipment is reserved for professional use. It is not intended for domestic use.
- The unit for indoor use only. To prevent or reduce the risk of electrical shock or fire, do not expose the unit to rain or moisture.
- If this device will be operated in any way different to the one described in this manual, it may suffer damage and the guarantee becomes void. Furthermore, any other operation may lead to dangers like short circuit, burns, electric shock, etc.
- Always inspect the mechanical and electrical parts of the Color Keep One equipment before fitting to check they are not damaged. Do not operate the product if you see damage. If the part is damaged, it has to be replaced by a qualified technician.
- Don't connect the device to a dimmer pack.
- Before starting any maintenance work or cleaning the fixture, cut off power from the main supply.
- Never attach to product other equipment different Color Keep One accessories.
- Never let the power-cord come into contact with other cables! Handle the power-cord and all connections with the mains with particular caution!
- Never remove warning or informative labels from the unit.
- Do not shake the device. Avoid brute force when installing or operating the devic.
- Make sure that the device is not exposed to extreme hear, moisture or dust.
- Keep any inflammable materials at a safe distance from the fixture.
- Make sure that the power-cord is never crimped or damaged. Check the device and the power cord from time to time. If the external cable is damaged, it has to be replaced by a aqualified technician.

INTRODUCTION

FEATURES

- · 100W RGBW 4-in-1 LED
- · Ultra-high output of 7000lm, lux output is 4400lux @ 3M(15°)
- · Exquisite color rendering, Ra≥92, R9≥92
- · Full spectrum with variable white color temperature selection from 1800K~8000K
- · Flawless 16-bit dimming and linear adjustment to ensure smooth fades
- · Silent operation due to advanced convection heat sink
- · Compact body, light weight and quiet operation
- Available optics:15°/25°/45°

SPECIFICATIONS

Light Source 100W RGBW 4-in-1 LED Color Temerature White LED: 3100K±100K

Fitxture CCT: 2200K~8000K

Lumen OutputUp to 7000lmLux Output4400lux @ 3M(15°)CRI $Ra \ge 92$, $R9 \ge 92$

DUV 0.002

Wavelength R: 624nm, G: 527nm, B:456nm

TM-30-15rg/rf 104/93 TLCI 90

LED Life Over 20K hrs
Beam Angle 15°/25°/45°
Field Angle 35°/53°
Pan 120°(manual)
Tilt 116°(manual)
Color Mixing RGBW
Strobe 0~30Hz

Dimmer 4 dimming curves with 0~100% adjustment LED Frequency 600Hz/1200Hz/2000Hz/4000Hz/10K Hz/25K Hz

Mains 100~240V AC, 50/60Hz

Consumption 100W@230V
Power Connection Power In
Power Factor 0.96@230V
Protocol DMX 512/RDM

DMX Channels 4/8CH

Data Connection 4Pin DMX In/Out, linking up to 32pcs Housing Die-cast magnesium with white finish


IP Rating IP66
Cooling Convection
Operating Ambient Tempt. -10°C ~45°C
Dimension 251*205*286mm

Weight 5.3KG

Accessories Louver, 60° diffusion filter





PHOTOMETRICS

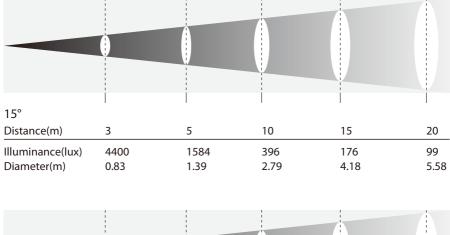



	0				
25°					
Distance(m)	3	5	10	15	20
Illuminance(lux)	1800	648	162	72	40
Diameter(m)	1.30	2.16	4.33	6.50	8.66

DIMENSION

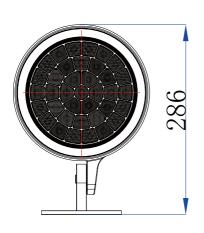

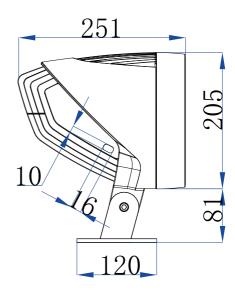


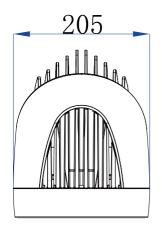


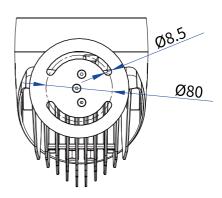

OVERVIEW


FIXTURE ILLUSTRATION

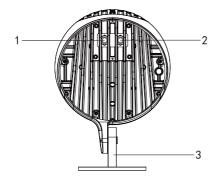


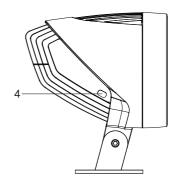

- 1. Power In
- 2. 4Pin DMX In/Out
- 3. Adjustable base for pan/tilt regulation
- 4. Safety rope adapting hole

PAN & TILT REGULATION

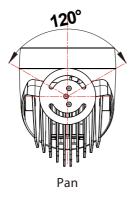


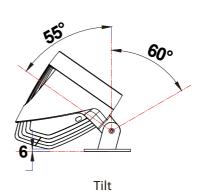


INSTALLATION



Pls use M8 expansion bolt to fix this product

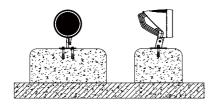

Floor-mounted

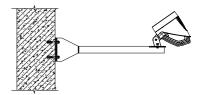

Flown-mounted

We recommend the following general guidelines below:

- Always mount this product in a safe position and make sure there is adequate room for ventilation, configuration and maintenance.
- 2. Keep any inflammable materials at a safe distance from the fixture, as indicated in the safety notes.
- 3. Make sure that the device is not exposed to extreme heat, moisture or dust.
- 4. Make sure that the structure to which you are hanging the modules can support the weight.


Color Keep One may be set up on a solid and even surface. Pls use M8 expansion bolt to fix the fixture. Safety rope is required for installation security. The mounting place must be sufficient stability and be able to support a weight of 10 times of the unit's weight.


When carrying out any installation, always comply scrrupulously with all the regulations (particularly regarding safety) currently in force in the country in which the fixture's being used.

- · Install the fixture at a suitable location by means of the mounting bracket
- \cdot Always additionally secure the fixture with the safety rope from falling down. For this purpose, fasten the safety rope at a suitable position so that the maximum fall of the fixture will be 20 cm.
- · Adjust the fixture and use the knob to slightly release or tighten the locking mechanism of the bracket if is neccessary


CONNECTIONN

POWER CONNECTION

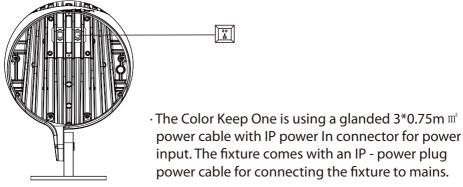

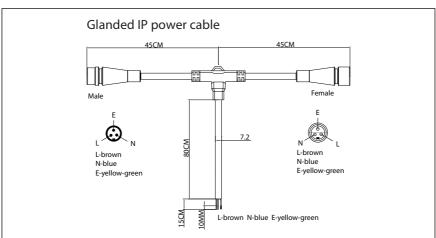


DMX CONTROL

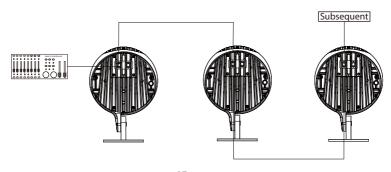


CONNECTIONN


RDM CONTROL

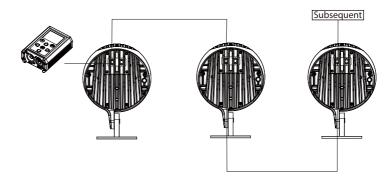

- · Color Keep One is using glanded 26AWG data cables with IP DMX In and Out connector for data cabling. The fixture comes with a 5pin XLR IP female adapting cable. You may use a DMX512 controller or a RDM device to operate the connection network.
- · Depending on the length of the DMX cable run, or other factors, it may be advisable to install a terminator at the last fixture in the run.

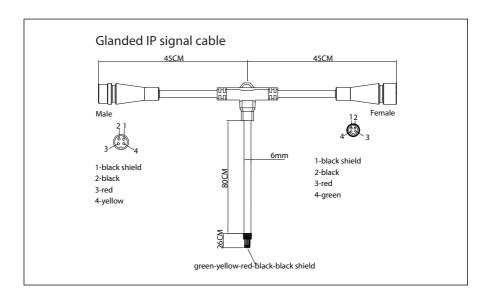

CONNECTIONN

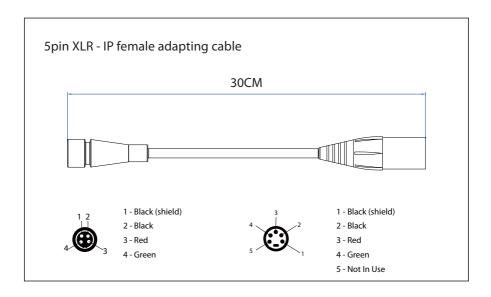

EXAMPLE OF DMX ADDRESSING

The below table shows an example of starting addresses for four fixtures assuming a first fixture with starting address of 001.

The actual starting addresses will be determined by the operator as needed to match external controller settings.

Relation between DMX and Address

MODE	ALLOCATION	START ADDRESS 1ST FIXTURE	START ADDRESS 2ND FIXTURE	START ADDRESS 3RD FIXTURE	START ADDRESS 4TH FIXTURE
4CH	001 - 004	001	005	009	013
8CH	001 - 008	001	009	017	025

 $Follow\ above\ method\ for\ subsequent\ fixtures,\ calculating\ starting\ addressed\ as\ indicated.$

www.eklights.com-

MENU

NO.	MAIN MENU	VALUE	Default
1	DMX Address	1-512	Default: 1
2	DMX Mode	4CH	Default: 4CH
_	DIVIX Mode	8CH	Delauit:4Ch
		Off	
,	Dimmer Mode	Dimmer 1	Default: Off
)	Diffiller Mode	Dimmer 2	Default: Off
		Dimmer 3	
		600Hz	
	LED Frequency	1200Hz	
		2000Hz	Default: 25K Hz
"		4000Hz	Delault. 23K Hz
		6000Hz	
		25K Hz	
		8200(Red)	
5		8201(Green)	
	Specific PIDS	8202(Blue)	White Balance
		8203(White)	
		82C8(Clear Device Hours)	



DMX CHART

4CH	Function	Value	Precent/Setting	Remark
1	Red	000-255	0-100%	
2	Green	000-255	0-100%	
3	Blue	000-255	0-100%	
4	White	000-255	0-100%	

8CH	Function	Value	Precent/Setting	Remark
1	Red/C	000-255	0-100%	
2	Green/M	000-255	0-100%	
3	Blue/Y	000-255	0-100%	
4	White/No Function	000-255	0-100%	
		000-010	No Function	
		011-140	Strobe from slow to fast	
5	Strobe	141-150	No Function	
		151-250	Random Strobe from slow to fast	
		251-255	No Function	
		000-010	No Function	
		011-020	2200K	
		021-030	2300K	
		031-040	2400K	
		041-050	2500K	
		051-060	2600K	
		061-070	2700K	
		071-080	2800K	
		081-090	2900K	
		091-100	3000K	
		101-110	3100K	
6	СТО	111-120	3200K	
		121-130	3300K	
		131-140	3500K	
		141-150	4000K	
		151-160	4500K	
		161-170	5000K	
		171-180	5700K	
		181-190	6500K	
		191-200	7000K	
		201-210	7500K	
		211-220	8000K	
		221-255	TBD	
7	Dimmer	000-255		
		000-010	RGBW Mode	Only in effect when CTO=000-010
	Settings	011-020	CMY Mode	Only in effect when CTO=000-010
		021-030	Dimmer Off	Hold 3S to save the setting
8		031-040	Dimmer1	Hold 3S to save the setting
		041-050	Dimmer2	Hold 3S to save the setting
		051-060	Dimmer3	Hold 3S to save the setting
		061-255	TBD	

vww.eklights.com-	
www.exiignts.com	



MAINTENANCE

MAINTENANCE AND CLEANING THE UNIT

- Make sure the area below the installation place is free from unwanted person during setup.
- Switch off the unit, unplug the main cable and wait till the unit has cooled down.
- All screws used for installing the device and any of its parts should be tightly fastened and should not be corroded.
- Housings, fixations and installation spots (celling, trusses, suspensions) should be totally free from any deformation.
- The main cables must be in impeccable condition and should be replaced immediately even when a small problem is detected.
- It is recommended to clean the front at regular intervals, from impurities caused by dust, smoke, or other particles to ensure that the ligh is radiated at maximum brightness. For cleaning, disconnect the main plug from the socket. Use a soft, clean cloth moistened with a mild detergent. Then carefully wipe the parts dry. For cleaning other housing parts use only a soft, clean cloth. Never use a liquid, it might pernetrate the unit and cause damage to it.

TROUBLESHOOTING

Problems	Possible causes	Checks and remedies
	No mains supply	Check the power supply voltage
	Dimmer fader set to 0	Increase the value of the dimmer channels
Fixture does not light up	Faulty LED	Replace the LED board
	Faulty LED board	Replace the LED board
General low light intensity	Dirty lens assembly Misaligned lens assembly	Clean the fixture regularly Install lens assembly properly
Fixture does not power up - No power - Loose or damaged power cord - Faulty internal power supply		Check for power on power outlet Check power cord Replace internal power supply

Contact an authorized service center in case of technical problems or not reported in the above table cannot be resolved by the procedure given in the table.



Address: NO.55 Zhongzhun Road, Cuiheng New District, Zhongshan City, Guangdong Province

www.eklights.com

Phone: 0086 (0760) 88280099